

FREEVIEWSHOP

Firmware Upgrade instructions for the Ultraplus 680 Platinum.

Download the channel data (*.fdu) or firmware (*.ird) onto a USB Memory stick.


Note:

the 11300.fdu is for 11300MHz L.O. LNBS

the 10750.fdu is for 10750MHz L.O. LNBS

the UNI.fdu is for Universal 9750/10600MHz L.O. LNBS

Insert the memory stick into the Ultraplus.

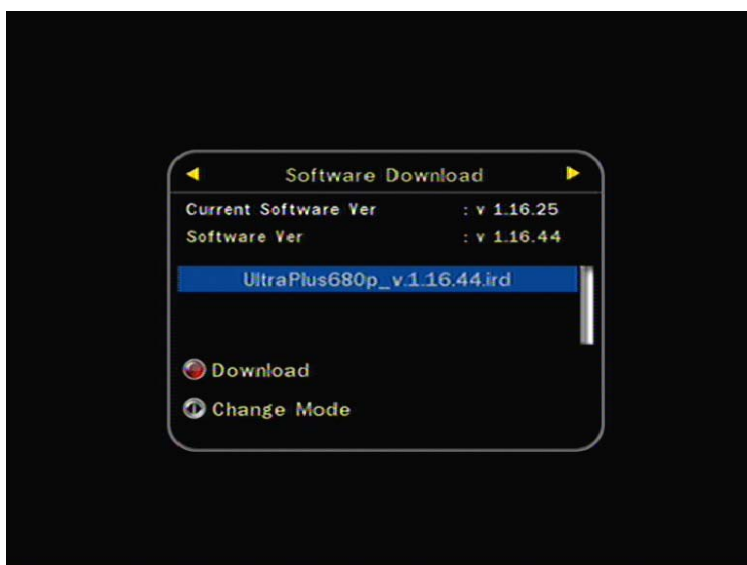


Press the Red button on the remote control to load the update. After it has finished and restarted remove the USB Memory stick.

FREEVIEWSHOP


☎ 09-8175105

🌐 www.freeviewshop.co.nz
@ sales@freeviewshop.co.nz


Press the Menu button on the remote control and use the arrow keys to navigate to System Recovery and press OK.

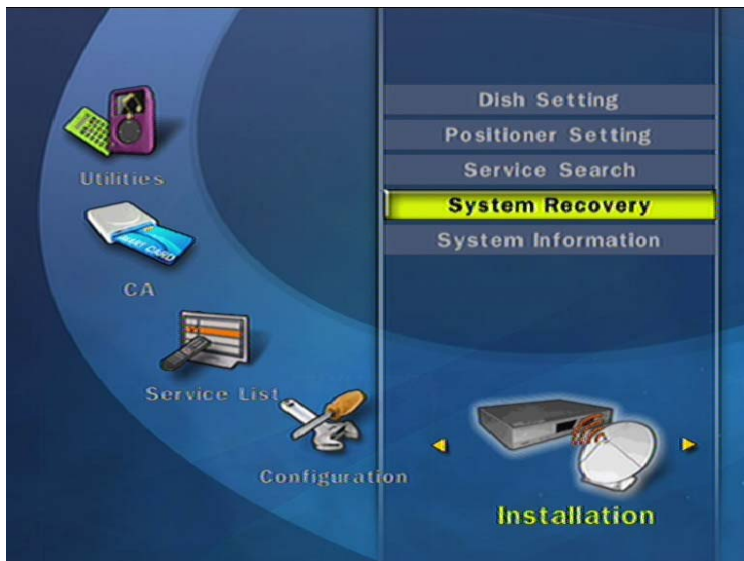

Press the OK button on the remote control to restore to factory default and enter the PIN Code (Default: 0000)

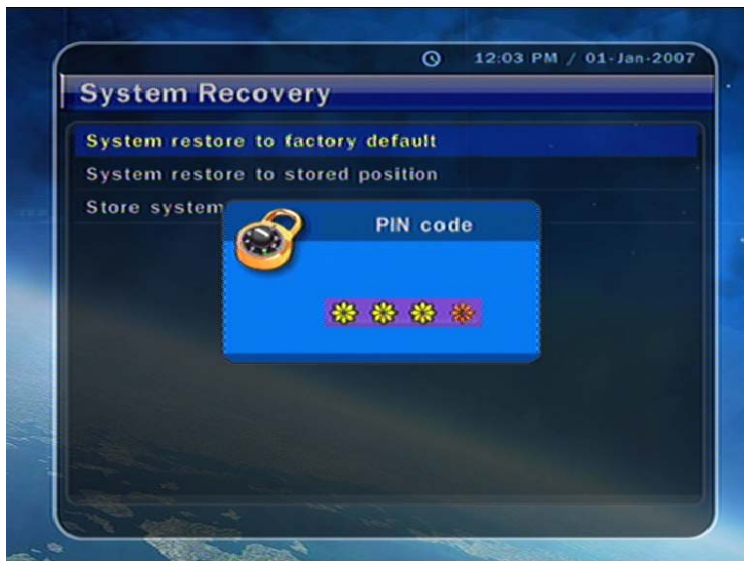

Press the OK button to select English

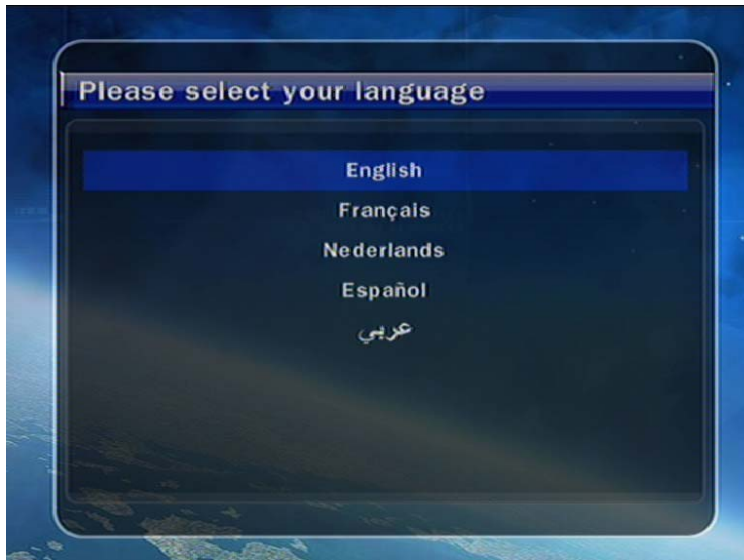


Press the OK to select the local time Zone



Scroll to New Zealand for the Daylight Savings option and press OK.



Insert the USB Memory stick again and press > to change mode.

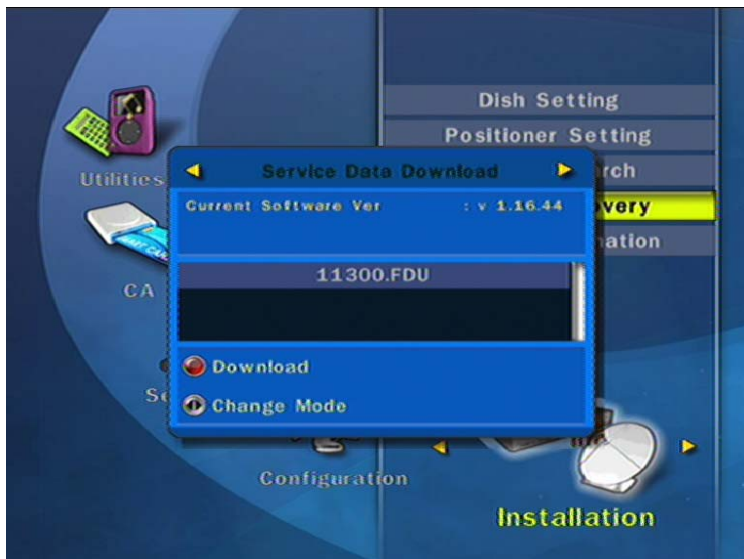

Press the Red Button to load the channel data