


Installation Instructions:

Installation examples Satellite or Terrestrial Splitters

A splitter can be used to split the signal coming from a satellite dish or UHF aerial.

Example 1: A splitter can be used to split the signal from a single satellite dish to go to several STBs, the STBs will then be able to access all channels on one polarity (e.g. all the Freeview channels).

Example 2: A splitter can be used to split the signal from a single UHF aerial to go to several TVs and or terrestrial STBs.

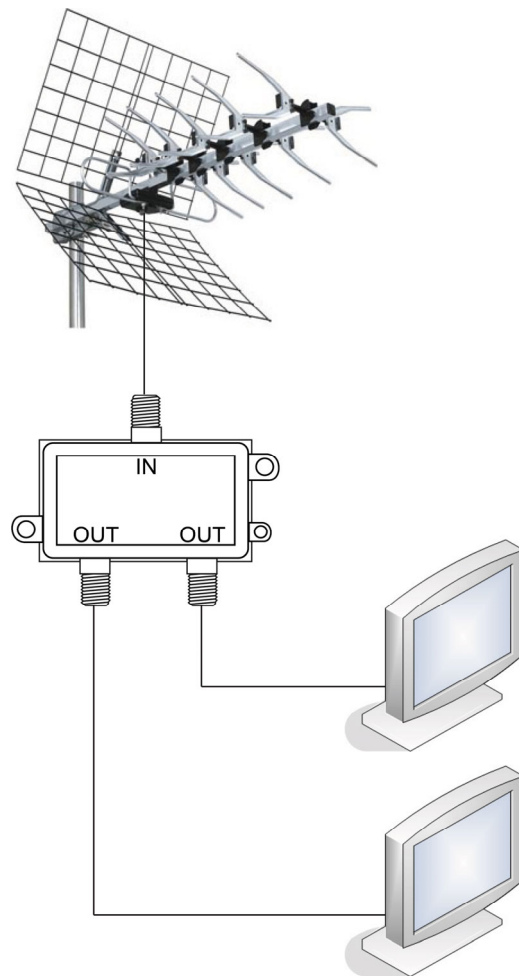

If you wish to access more than one polarity from 2 STBs you should use a Dual Output LNB. If you wish to access more than one polarity from 3 STBs or more you could use a Dual Output LNB and a multiwitch(s) please contact Freeviewshop and we will be happy to give you specific advice.