

Installation Instructions:

Setting the skew for a Zenus Dual Output LNB.

As the signal broadcast from the OPTUS satellites (including OPTUS D1 that broadcasts Freeview) is polarized, it is critical the skew is set correctly.

To use the LNB on one of the OPTUS satellites the skew should be set so the cable will attach to the LNB at 8 o'clock looking into the dish from the front, this is shown below:

