

1 Before you start

Please check that you have all of the following:

Magic TV™ HDTV Personal Video Recorder




Magic TV™ Remote Control




4x AAA batteries




Component video cable

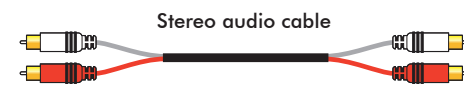

Stereo audio cable

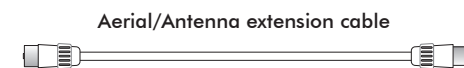

Aerial/Antenna extension cable

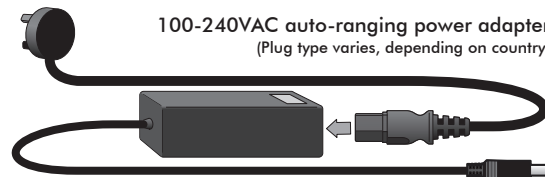


100-240VAC auto-ranging power adapter
(Plug type varies, depending on country)

2 Starting the wiring

Before starting, please take some time to read the Safety Instructions included in the Owner's Guide

a POWER + ANTENNA


Connect the power adapter and an aerial/antenna to Magic TV™. Leave the power outlet switched off or unplugged until all the wiring work has been completed. A roof-mounted antenna is recommended for best reception.

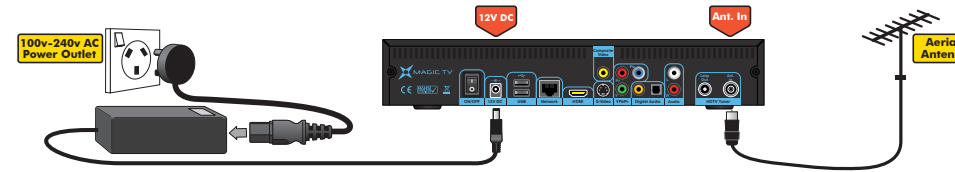

Plug and socket type varies, depending on country.

b OPTIONAL - Antenna loopthru


If you want to retain analogue TV reception on other devices with a TV tuner (TV, VCR or DVD recorder for example), connect the included extension cable as shown. Many devices can form part of the antenna loop, by forming a chain. We recommend using Magic TV™ as the first component on the chain and your television as the last.

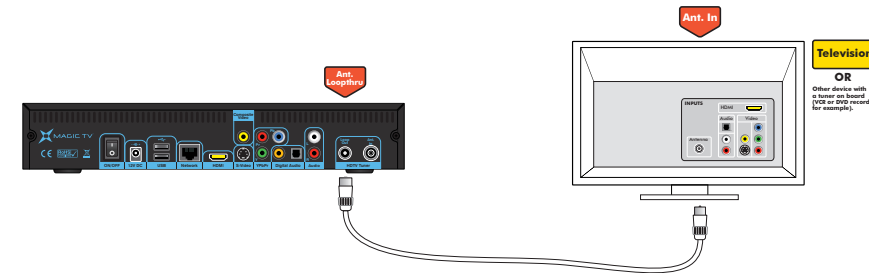

3 Connecting to a TV


a VIDEO + AUDIO for HDMI-equipped HDTVs

HDMI is the highest quality output from Magic TV™ and can also carry multi-channel audio, reducing cabling.

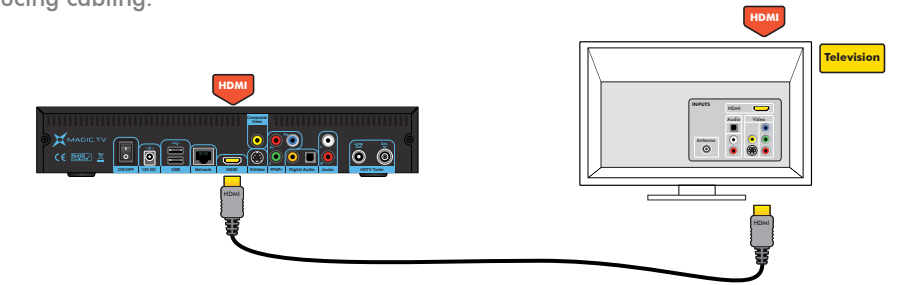


b VIDEO for HDTVs without HDMI

In order to get High Definition video from Magic TV™ without HDMI, Component (YPbPr) must be used.

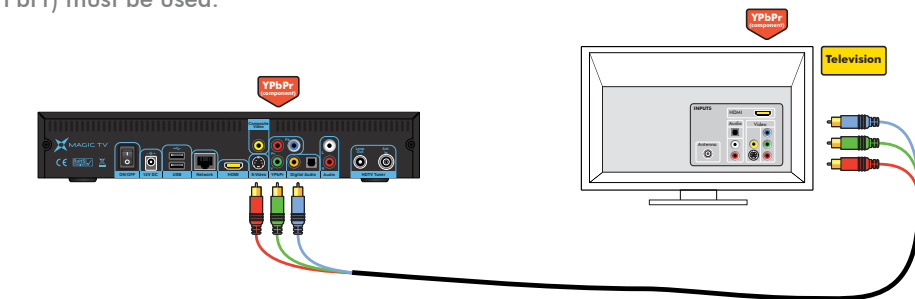

c AUDIO for HDTVs without HDMI

Not many TVs accept a digital audio signal in which case, the Stereo audio outputs of Magic TV™ can be used.

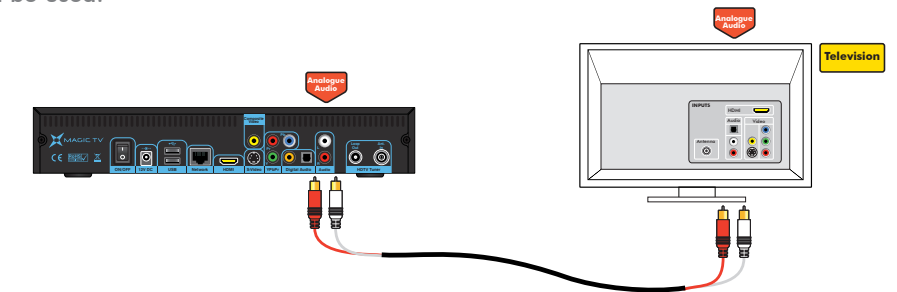

More wiring options can be found in section 3 of the Owner's Guide

Start here

Thank you for choosing Magic TV™

This guide will provide you with simple instructions for connecting and operating Magic TV™

4 Switching on for the first time

Magic TV™ is now wired up and ready to be powered up.

- Switch on the system at the mains
- Switch on the devices (Magic TV™ has a power switch on the rear panel)
- Select the correct input on your TV


You will now see the Magic TV™ Guided Setup
If you cannot, refer to **section 10.2** of the main Owner's Guide

Guided Setup

Welcome to Magic TV™ Guided Setup. Choose 'Yes' to continue


Step 1 Select the best Video Output Format for your TV

1080i (50Hz)	The default setting – accepted by all HDTVs
1080p (50Hz)	A good choice if your TV accepts a 1080p HDMI input
720p (50Hz)	A good choice if your 'HD Ready' TV has 720 or 768 lines of resolution
576i (50Hz)	Use only if your TV is Standard Definition



Step 2 Please select the Aspect Ratio of your TV


16:9	Choose this if your TV is widescreen (most modern Plasma and LCD TVs)
4:3	Choose this if you have a traditionally shaped TV
16:10	Choose this if you are using a widescreen computer monitor as your display



Step 3 Scan for channels automatically


This step will scan through all the available frequencies looking for channels. Once complete, Magic TV™ will display a list of the channels found.

If no channels are found, please refer to **section 10** of the main Owner's Guide.



Guided Setup is now complete

5 The Magic TV™ remote control

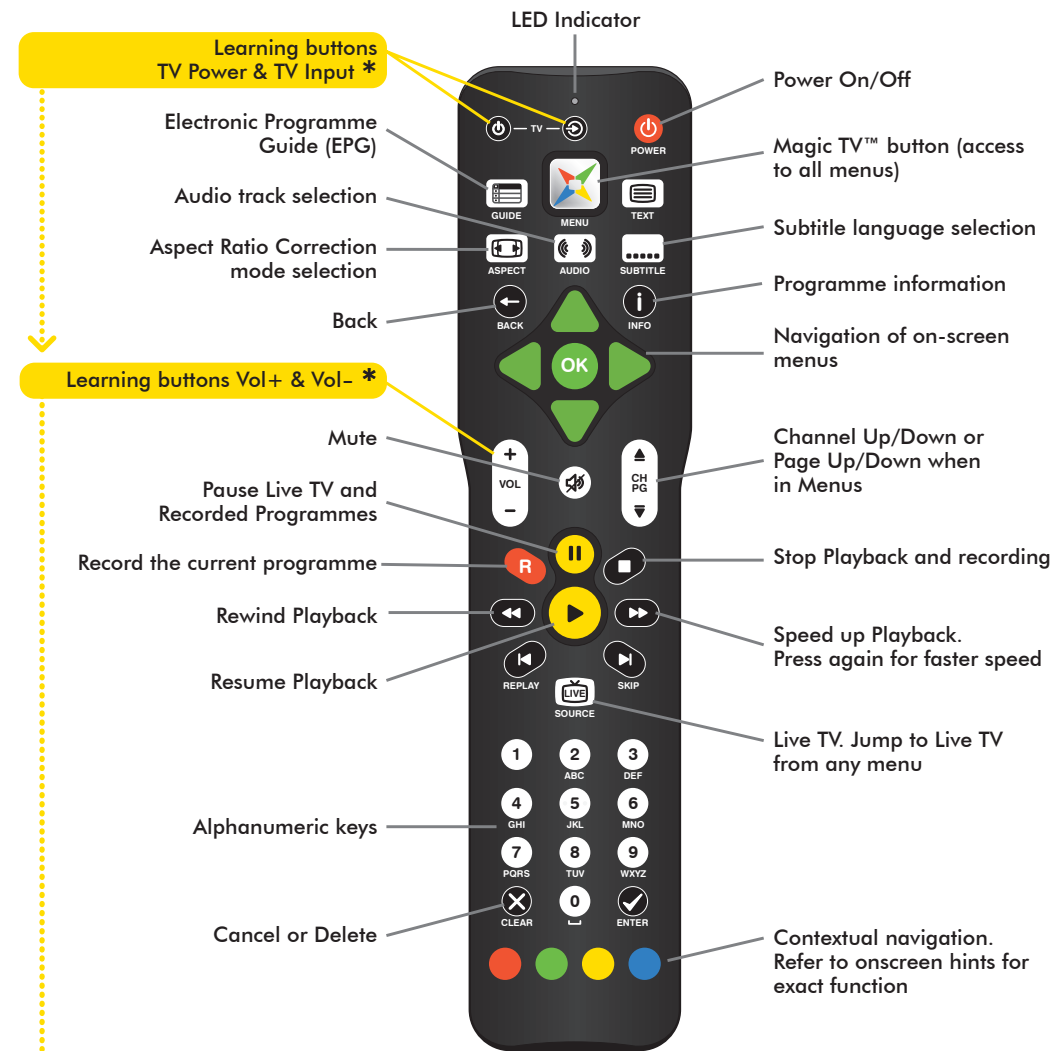

* Important Information

The TV Power and TV Input buttons are not functional until you teach the Magic TV™ remote.

For information on how to program the learning buttons, please see **section 2.1** of the Owner's Guide.


Inserting the Batteries

- Push in the ridged area of the battery cover and slide the cover down
- Insert four AAA batteries (supplied) by matching the + and - marks on the batteries to the + and - marks in the battery compartment. Note that two of the batteries will slide under the casing slightly
- Replace the battery door

If the batteries are working and are inserted correctly, the LED Indicator will flash when any button is pressed.

6 Tips

Change channel in 4 ways:

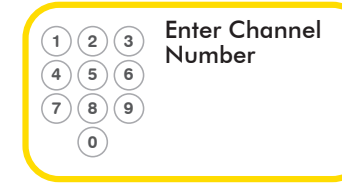

Record in 3 ways:

Press 'R' during Live TV to record instantly

Highlight a programme on the Electronic Programme Guide (EPG) and then Press R

Set a timer in Main Menu → Recording → Timer Recording

Other great features:

TimeShifting
Pause Live TV and don't miss a thing!

Choose 'Record Whole Series' and make sure you don't miss your favourite programmes

Find recordings fast, by adding them to folders (see main guide section 6.8)

For more help and support see the Owner's Guide



Email Support: support@magictv.co.nz

Other contact details for your region are available at www.magictv.com

© 2011 Pixel Magic Systems Ltd. All rights reserved. Magic TV and Pixel Magic are Trademarks of Pixel Magic Systems Ltd. Freeview | HD and MyFreeview | HD are Registered Trademarks of Freeview Ltd. All other trademarks are properties of their respective owners. Specifications subject to change without notice.

