 


FREEVIEWSHOP

Installation Instructions for using a Globo 4100C with an existing dish for Freeview reception.

The Globo 4100C is pre configured for a Satellite Dish aimed at OPTUS D1 (Freeview and Sky), Plug your set top box in and turn it on and select the appropriate AV input on your TV. The Globo 4100C is pre configured for an 11300MHz L.O. LNB. If you see the "Information No Signal!" message when you select TV One and TV3 you probably don't have an 11300MHz L.O. LNB and should try changing the LNB L.O. freq to 10750MHz as shown below.



The LNB at the left below has a L.O. of 10750MHz, if you have one of these you will need to take the steps shown below:



10750 MHz



11300MHz



11300MHz

How to change the LNB L.O. frequency to 10750MHz

If you have the LNB shown on the left press **MENU** on your remote control.



FREEVIEWSHOP

☎ 09-8175105

🌐 www.freeviewshop.co.nz
@ sales@freeviewshop.co.nz

Scroll to Installation and press **OK**, press **OK** again.



Scroll to LNB Type : Standard and press **OK**. Then Scroll down to the LNB Frequency which will probably be 11300MHz



Use the > to change it to 10750MHz and press **OK**.



Now Press Exit and press OK to save changes.



Now Press Exit once more.