


# FREEVIEWSHOP

## Instructions for converting Hyundai AH-3110 HD and SD TRP files to other formats using Handbrake


Download Handbrake from <http://handbrake.fr/downloads.php>

Run Handbrake and click source and select the TRP file you wish to convert. Then select the output type you would like to convert to on the Video Tab:

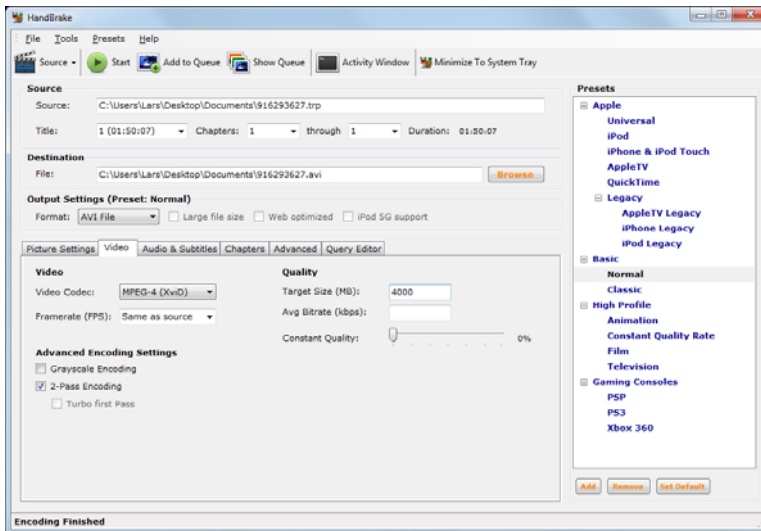

Select Picture settings Tab, here you can choose to deinterlace the video (not needed for progressive channels like TV One, TV 2 or the Freeview HD demo channel).

The Decomb and Deinterlace options are used to do that and you may wish to experiment to find which setting you would like e.g. Slow will do the best job but take a long time. Probably you will not want to do both Decomb and Deinterlace one should suffice.

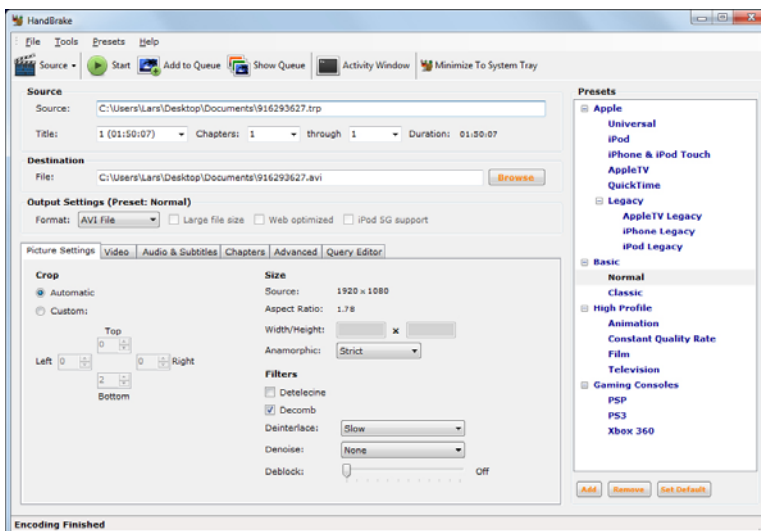

FREEVIEWSHOP

09-8175105



www.freeviewshop.co.nz

@ sales@freeviewshop.co.nz