

FREEVIEWSHOP

Installation Instructions for the BBC World Package

Step 1: Assemble Dish and Mount using instruction sheets supplied:

Step 2: After assembling the dish, fit LNB to dish ensure the skew is as is shown for your LNB:



The C band LNB should be pushed forward as far as possible within the LNB holder and the offset scalar ring should be pushed back until it touches the LNB support arms. We recommend you drill a hole in the LNB at the lowest point to allow water to drain out. (Do this at the end incase the skew is changed a little later):




FREEVIEWSHOP

☎ 09-8175105

🌐 www.freeviewshop.co.nz
@ sales@freeviewshop.co.nz

Step 3: Set the gauge at the back of the dish to the **approximate** elevation given in the table below, Dishes are offset so that the LNB does not shadow the signal received:

Location	Elevation Sat	Azimuth (Compass)
Kaitia	49	334.2
Whangarei	48.1	332.2
Auckland	46.8	331.1
Thames	46.4	329.6
Hamilton	45.7	329.9
Rotorua	45.2	328.1
Gisbourne	44.2	325.1
Hastings	43.4	326.7
Palmerston North	42.8	328.4
Lower Hutt	42.0	329.2
Wellington	42.0	329.4
Picton	42.0	330.5
Nelson	42.1	331.7
Blenheim	41.8	330.5
Westport	41.7	334.1
Christchurch	39.7	331.3
Timaru	38.8	332.5
Oamaru	38	332.8
Dunedin	37.2	333.0
Invercargill	36.6	335.9
Stuart Island	35.9	336.4

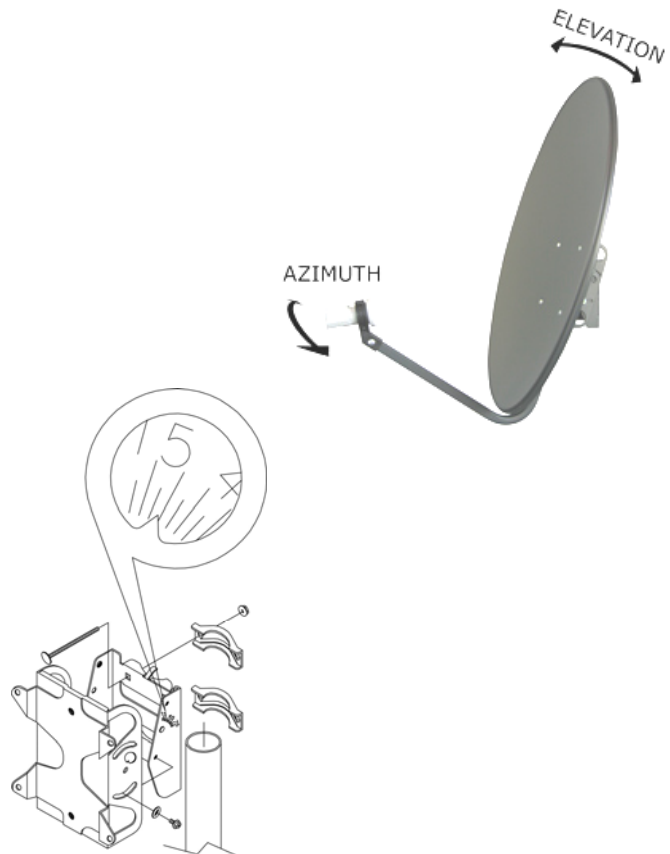

Step 4: Align the dish using a sat finder or the receiver as detailed below

To fine tune the dish alignment using the receiver.

Press the **MENU** button on the remote control to enter the Main Menu.



Select Dish Setting and press **OK**.

Select the Intelsat 5 satellite and make sure you have the 4160 M 26479 [H] TP selected for the Frequency



Move the dish until you get a lock on the satellite (The Quality will shoot up sharply when you find the satellite). This step may take some time. You should now optimize the Elevation and Azimuth of your dish, the position of the offset scalar ring and the Skew of the LNB to get the Quality indicator as high as possible.



Your receiver is pre tuned so once you have finished you can just press exit a few times and proceed to watch BBC World and Australia Network.